


# Shallow Composite Floor Decks

## Sitework

### Bearing requirements

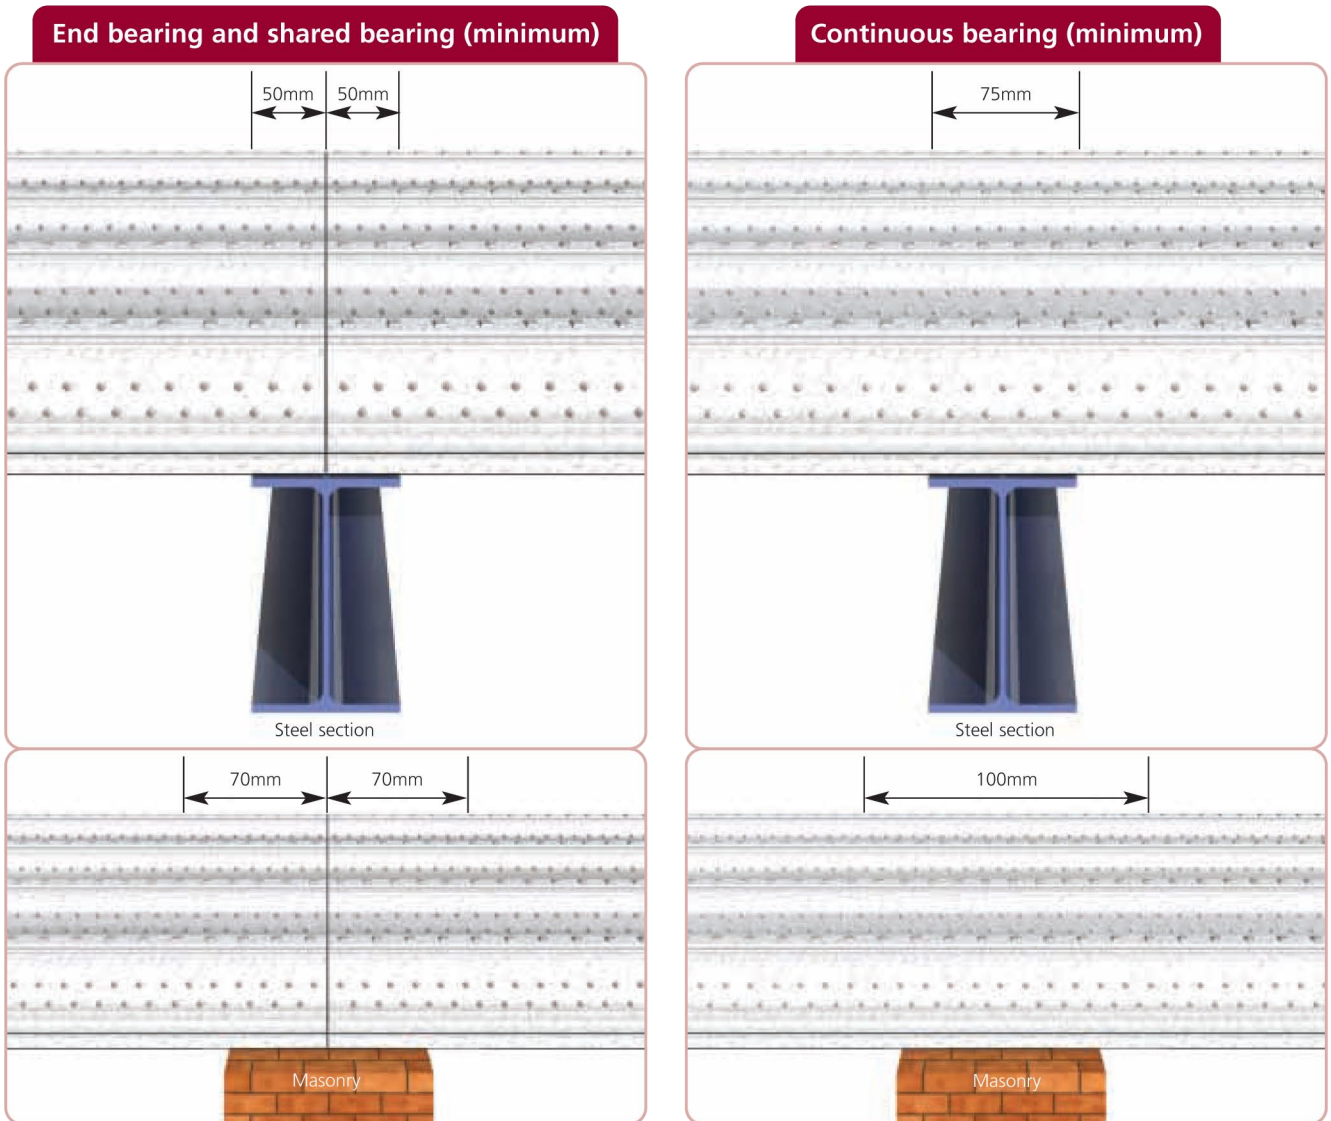

### Edge trim

You should use edge trim to maintain the wet concrete at the correct level at the decking perimeters. Fix it to the supports in the same manner as the deck and restrain the top by straps at 600mm centres fixed to the top of the deck profile with steel pop rivets or self-drilling screws.

Edge trim depth	Edge Trim Selector			
	Maximum Cantilever (mm)			
	Galv. Steel Edge Trim Thickness (mm)			
130	0.9	1.2	1.6	2.0
150	0.9	1.2	1.6	2.0
200	x	1.2	1.6	2.0
250	x	1.2	1.6	2.0
300	x	x	1.6	2.0
350	x	x	x	2.0

x - not recommended

